

# Section 10 MAINTENANCE AND OPERATION INFORMATION

## 1. Cleaning the copier


### CAUTION

For safety purposes, ALWAYS remove the power plug from the outlet when performing cleaning operations.

#### ● Cleaning the original cover

Lift open the original cover. Wipe the back side of the original cover with a soft cloth dampened with alcohol or a mild detergent.


\* Never use thinner or other organic solvents for this purpose.

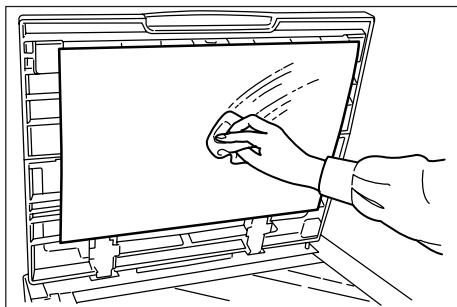

#### ● Cleaning the platen


Lift open the original cover. Wipe the platen with a soft cloth dampened with alcohol or a mild detergent.

\* Never use thinner or other organic solvents for this purpose.

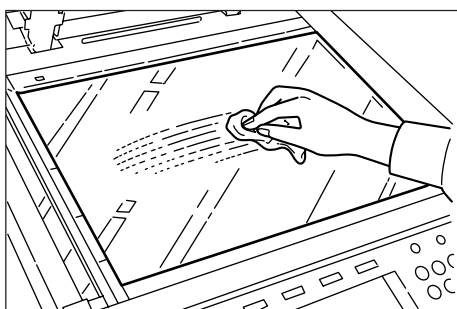

\* If soiling, such as black lines appear on the copy while using the optional Document Processor, the slit glass (a) is soiled. Wipe the slit glass with a soft dry cloth.

\* Never use water, thinner, organic solvents or alcohol.

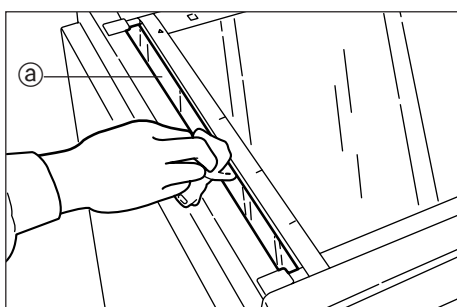


#### ● Cleaning the separator

##### NOTE

To keep the best copying quality, perform cleaning periodically (approximately once a month) using the following procedure.


#### 1 Open the front cover.

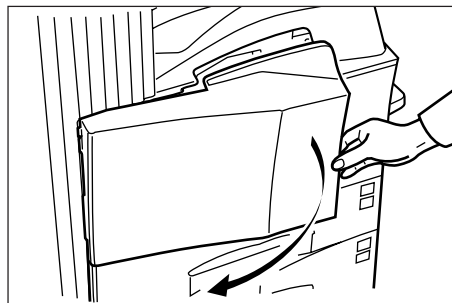


##### NOTE

When the slit glass becomes dirty, "Clean the slit glass for original fed from DP." ["Clean the slit glass for original fed."] may appear. In this case, perform the cleaning operation on the slit glass and then touch the "End" key.

#### Inch specifications


 **Clean the slit glass for original fed from DP.**

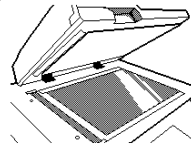


1. Open the document processor.
2. Clean the surface of narrower glass located at left with a dry cloth.
3. Please close the document processor.
4. Press END key

If the slit glass is dirty, black line will appear on the copy.

#### Metric specifications

 **Clean the slit glass for original fed.**

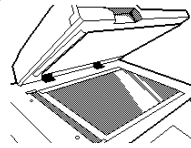


1. Open the document processor.
2. Clean the surface of narrower glass located at left with a dry cloth.
3. Please close the document processor.
4. Press END key


If the slit glass is dirty, black line will appear on the copy.

## Section 10 MAINTENANCE AND OPERATION INFORMATION


- 2** Remove the cleaning brush.

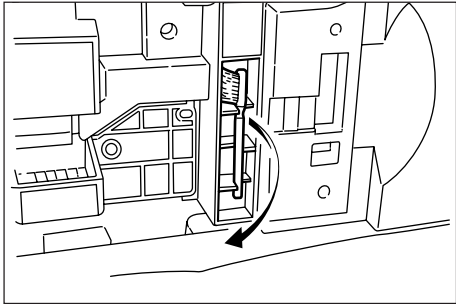

- 3** Pull up the left cover 1 handle to open the left cover 1.

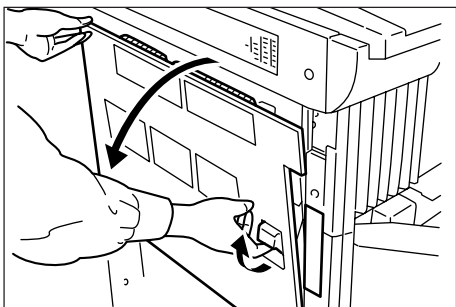

- 4** Clean the separator by moving the cleaning brush from left to right several times along with the separator.

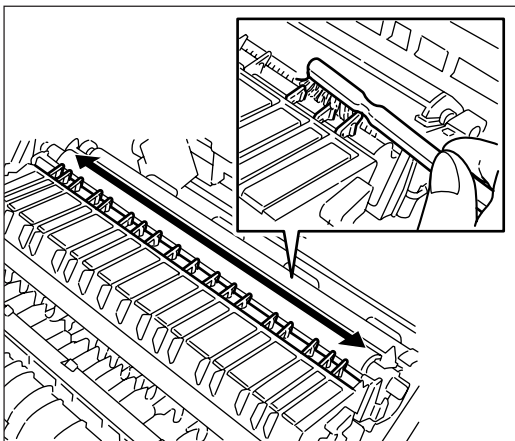


- 5** Close the left cover 1.

### ● Cleaning the transfer roller


- 1** Open the front cover.




- 2** Remove the cleaning brush.

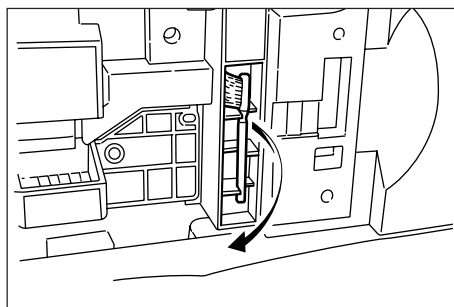

- 3** Pull up the left cover 1 handle to open the left cover 1.

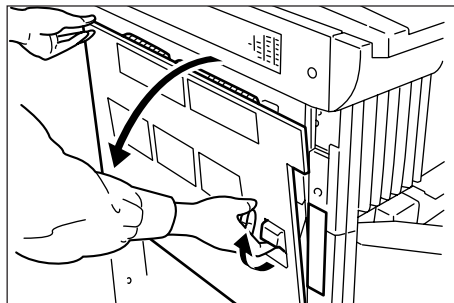

- 4** While rotating the gear as shown, clean the transfer roller by moving the cleaning brush from left to right along with the transfer roller.

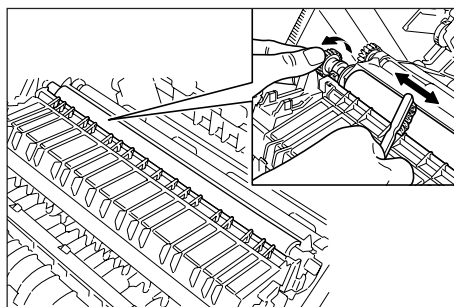

- 5** Close the left cover 1.