

FS-Series Printers (with LCD Display)



The page count or meter reading from FS-Series printers can be obtained from a **Status Page** print out.
If your printer has no LCD Display, follow the instructions for FS Series Printers (no Display)

Use the following steps to print out a Status Page.

STEP 1 Press the **MENU** button on the printer front panel.


STEP 2 Press the **UP** or **DOWN** arrow keys to select the **PRINT STATUS PAGE** appears.

Print
Status Page

STEP 3 Press the **OK** button. A question mark (?) will appear.

Print
Status Page ?

STEP 4 Press the **OK** button again and the Status Page will print out. The total page count is available in the **Page Information** section (2).

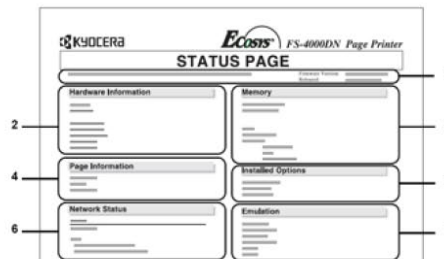

STEP 5 Press the **MENU** button to return to normal printing mode.