

KM-2550




These models use an **electronic counter** to record the meter readings. This can be read off the LCD display or printed out in a report.

Use the following steps to view the electronic meter reading or print out the report.


STEP 1 Press the **System Menu / Counter** key on the Operator Panel (top left hand side).

The System Menu will appear on the LCD display.

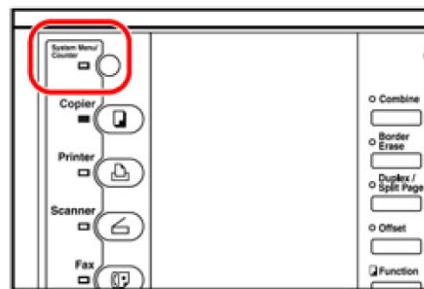


STEP 2 Press the **DOWN ARROW** key on the keypad and highlight the **COUNTER CHECK** menu option.

 Press the **ENTER** key to select the option.




STEP 3 To **PRINT** the Counter Report press the **DOWN ARROW** key on the keypad and highlight the **OUTPUT COUNT** menu option or press the number **4** key.

 Press the **ENTER** key to output the report.



 STEP 3 To **VIEW** the Counters press the **DOWN ARROW** key on the keypad and highlight **OUTPUT COUNT** menu option or press the number **2** key. Press the **ENTER** key to view the counts.



Use the **UP** and **DOWN ARROW** keys to display the **COPY**, **PRINTER** and **FAX** counters.

You need to add these values together to get your Meter Reading (Total Count).

STEP 4 Press the **STOP/CLEAR** button or press the number **1** key to highlight the **END** menu option. Press the **ENTER** key to return to the **SYSTEM MENU** (step 1).

STEP 5 Use the **UP ARROW** key to highlight the **END** menu option and press the **ENTER** key to return to normal COPY mode.